

DISHPLAYER 7100/7200 KEYBOARD

Code Set Button

Used to start the input of tv code in remote

TV/WEB Mode Select Button

Press to select TV or WebTV mode

View Button

Switch between TV and Web viewing

F1 - F7 Buttons

Display Favorites folders assigned to F-keys

TV /Video Button

Press to switch through TV Inputs

TV Power Button

Turns On/Off the TV

WebTV Power Button

Turns On/Off the DISHPlayer

Favorites Button

Display favorite channels or Web sites

Home Button

Go to current Home (TV or Web)

Search Button

Display TV Listings search or Internet search tool

Mute Button

Turn TV sound On/Off

Volume Button

Press to lower or raise the TV sound

Mail Button

Displays e-mail system

Find Button

Displays word search tool

Standard Keyboard Function

Info Button

Display TV program or web page information

Go To Button

Displays web address entry box

Channel Button

Press to change Satellite or TV channels

Save Button

Save displayed page to Favorites folder

Send Button

Send address of Web page by e-mail

Edit Button

Activates text cursor when text field is selected

Back Button

Returns to previous screen

Scroll Up/Down Buttons

Scroll screens, TV Listings and Web pages

Option Button

Press to display Options panel (includes TV Pause and goes to features)

Recent Button

Display recent channels or web pages

