



## DISH 322 W/VCR Coax Cable Connections

NOTE: The devices shown below are for EXAMPLE ONLY.

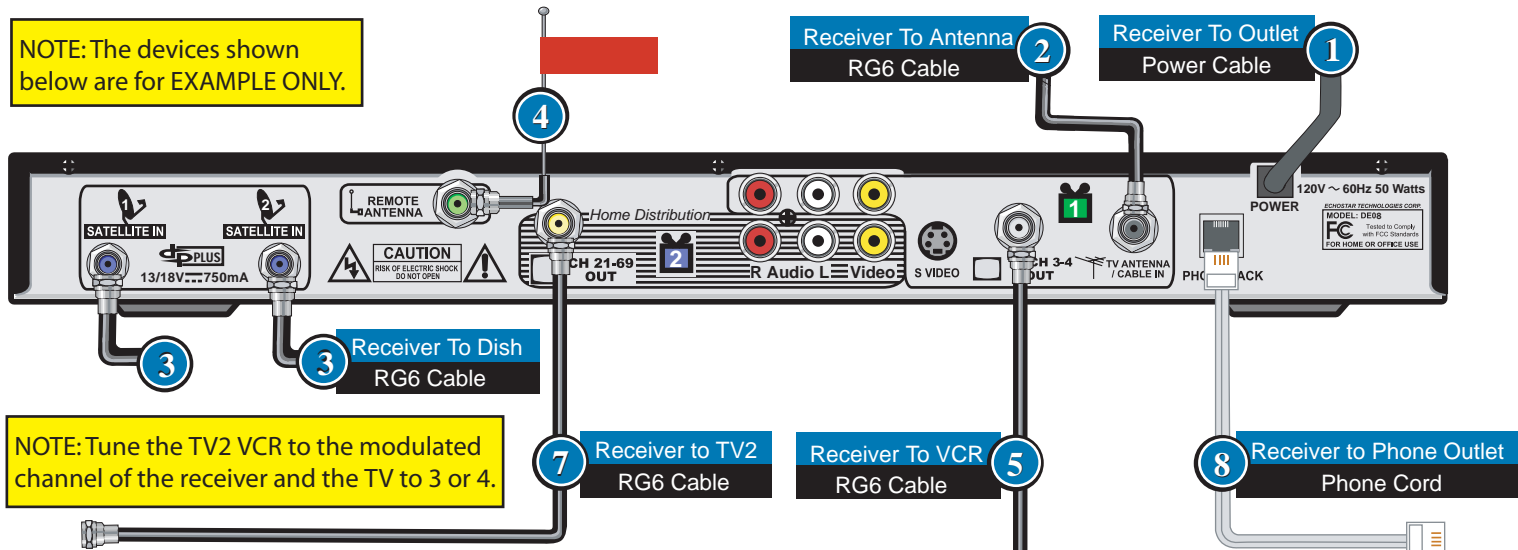

NOTE: Tune the TV2 VCR to the modulated channel of the receiver and the TV to 3 or 4.

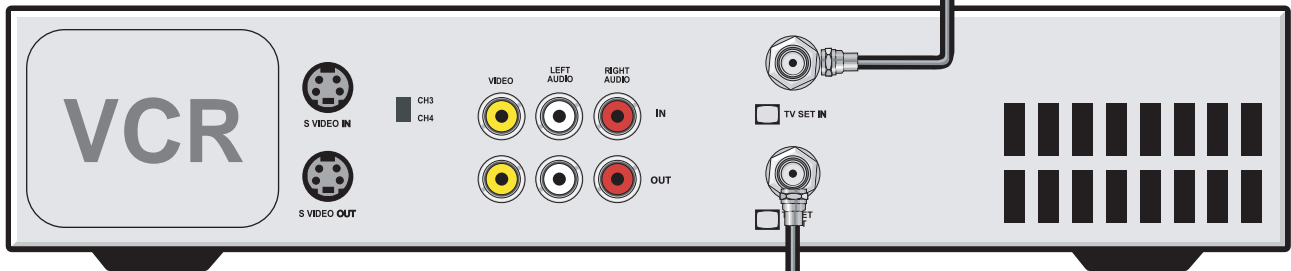

NOTE: Tune the TV1 VCR to channel 3 or 4 to match the receiver.

