
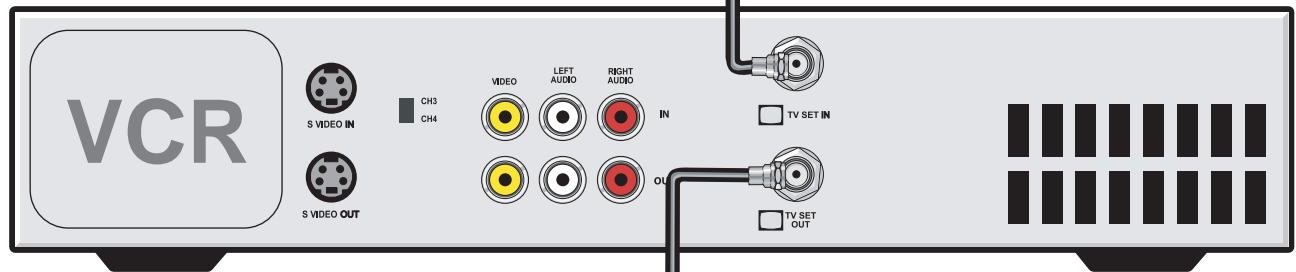


## DISH 721 W/VCR Coax Cable Connections

NOTE: The devices shown below are for EXAMPLE ONLY.

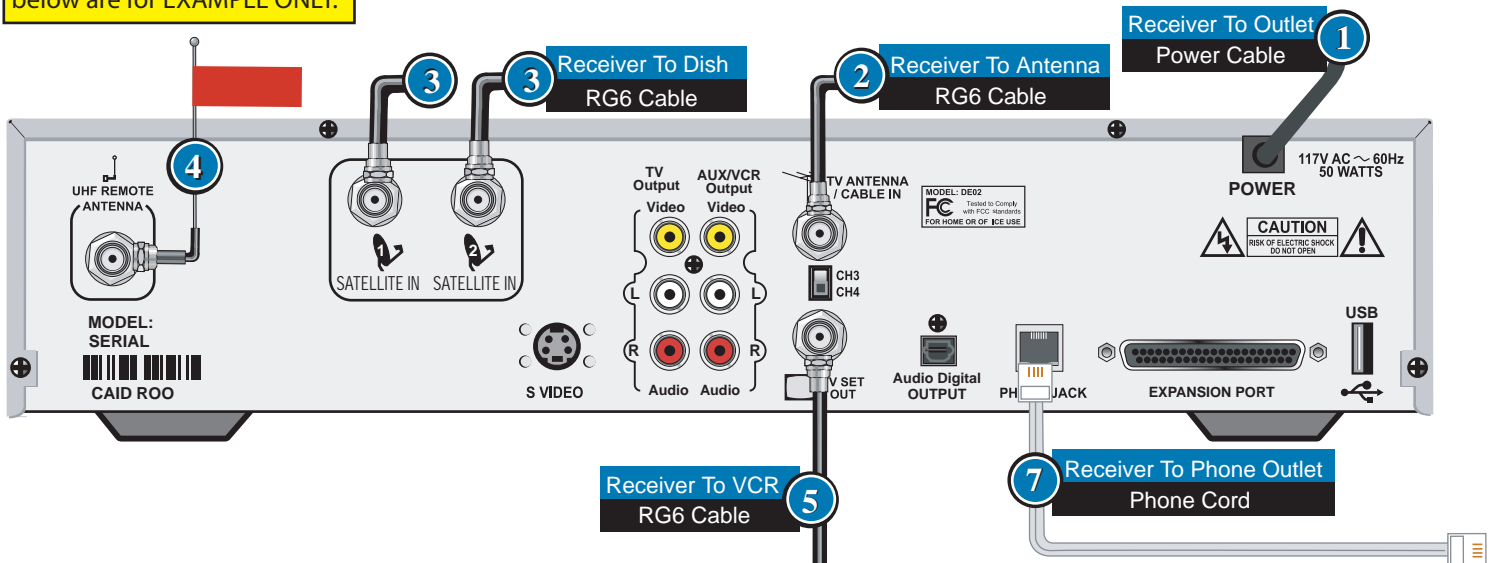

NOTE: Keep the VCR tuned to channel 3 or 4 to match the receiver.

VCR To TV RG6 Cable (6)

