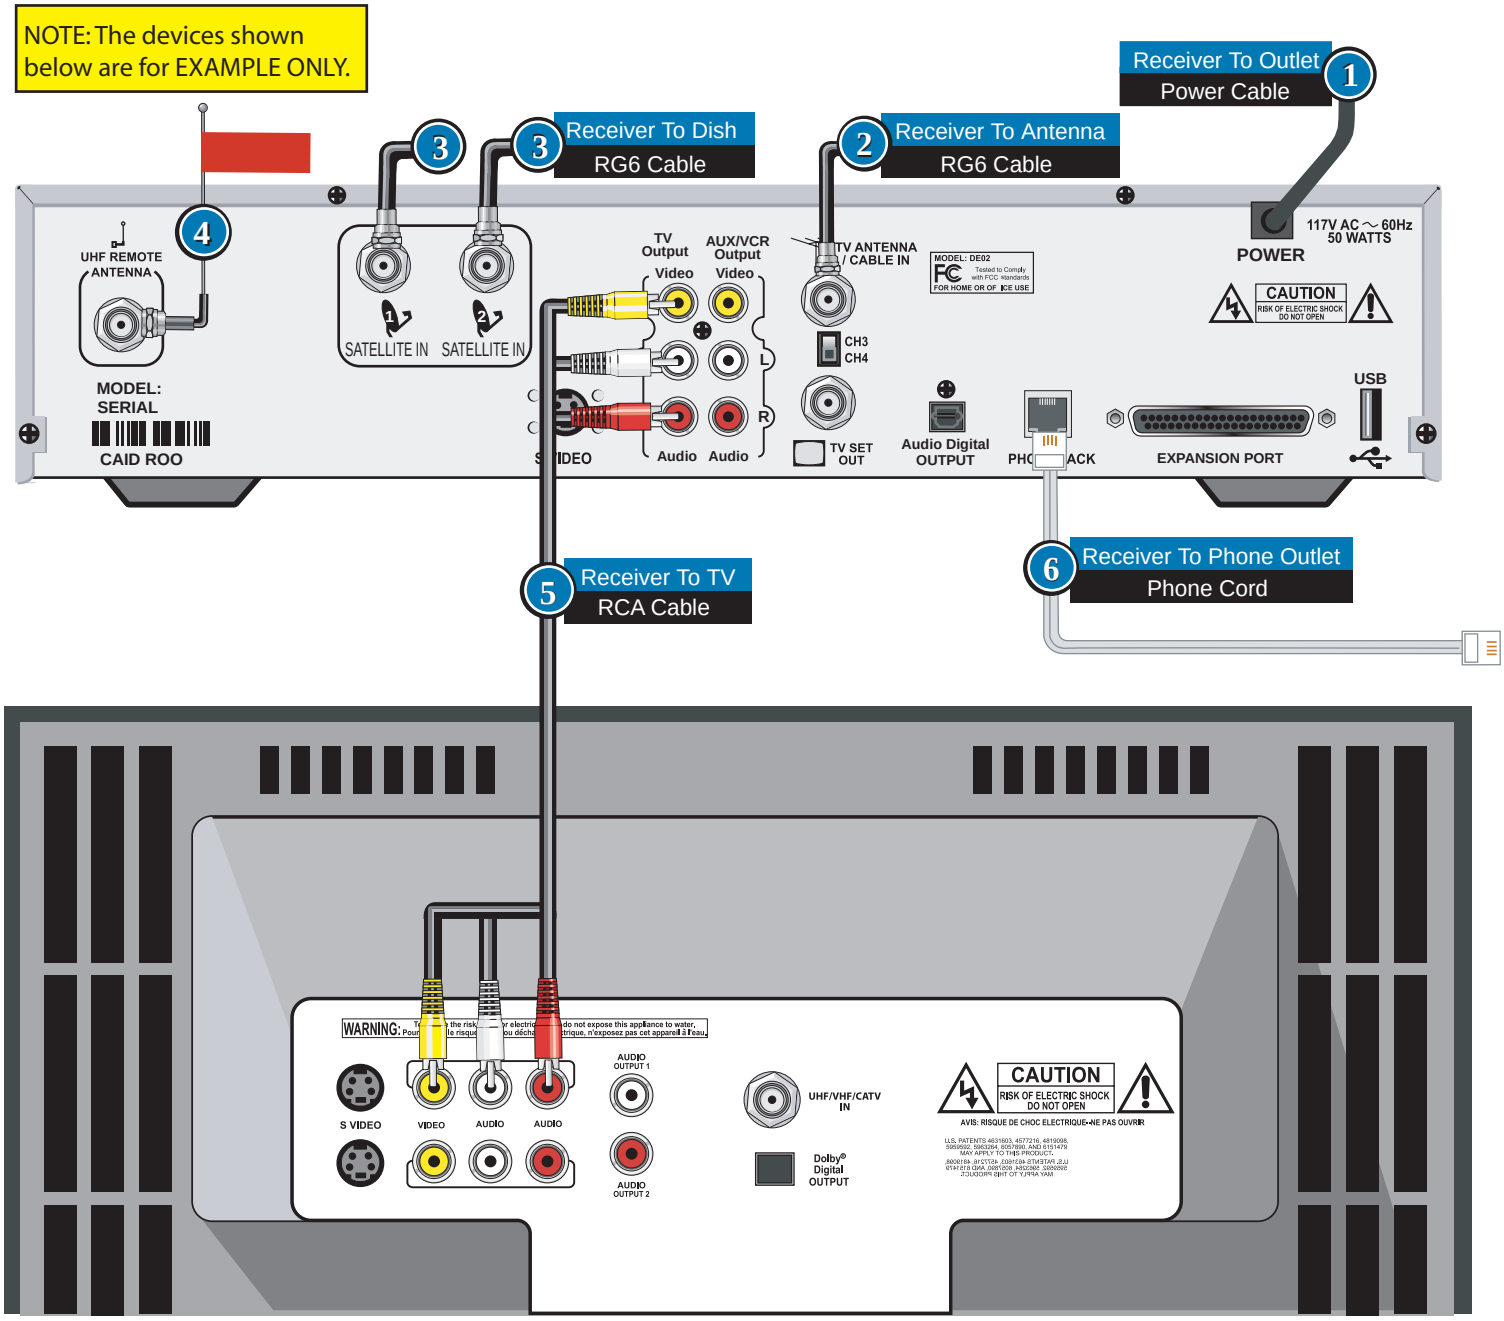DISH 721 RCA Cable Connections